

Aftermarket Stereo Wiring Diagram

SWITCHED IGNITION POWER

CONSTANT BATTERY POWER

CHASSIS NEGATIVE GROUND

ILLUMINATION

AMPLIFIER TURN ON

POWER ANTENNA

DIMMER

LEFT FRONT POSITIVE

LEFT FRONT NEGATIVE

LEFT REAR POSITIVE

LEFT REAR NEGATIVE

RIGHT REAR POSITIVE

RIGHT REAR NEGATIVE

RIGHT FRONT POSITIVE

RIGHT FRONT NEGATIVE

SUBWOOFER MONO POSITIVE

SUBWOOFER MONO NEGATIVE

AUX AUDIO LEFT CHANNEL

AUX COMMON GROUND

AUX AUDIO RIGHT CHANNEL

AUX DET


AUX GND

SHORT V

ON-VEHICLE SERVICE

OVERDRIVE CONTROL SYSTEM

O.D. indicator lamp glows when ignition (not running) as well as when it is running

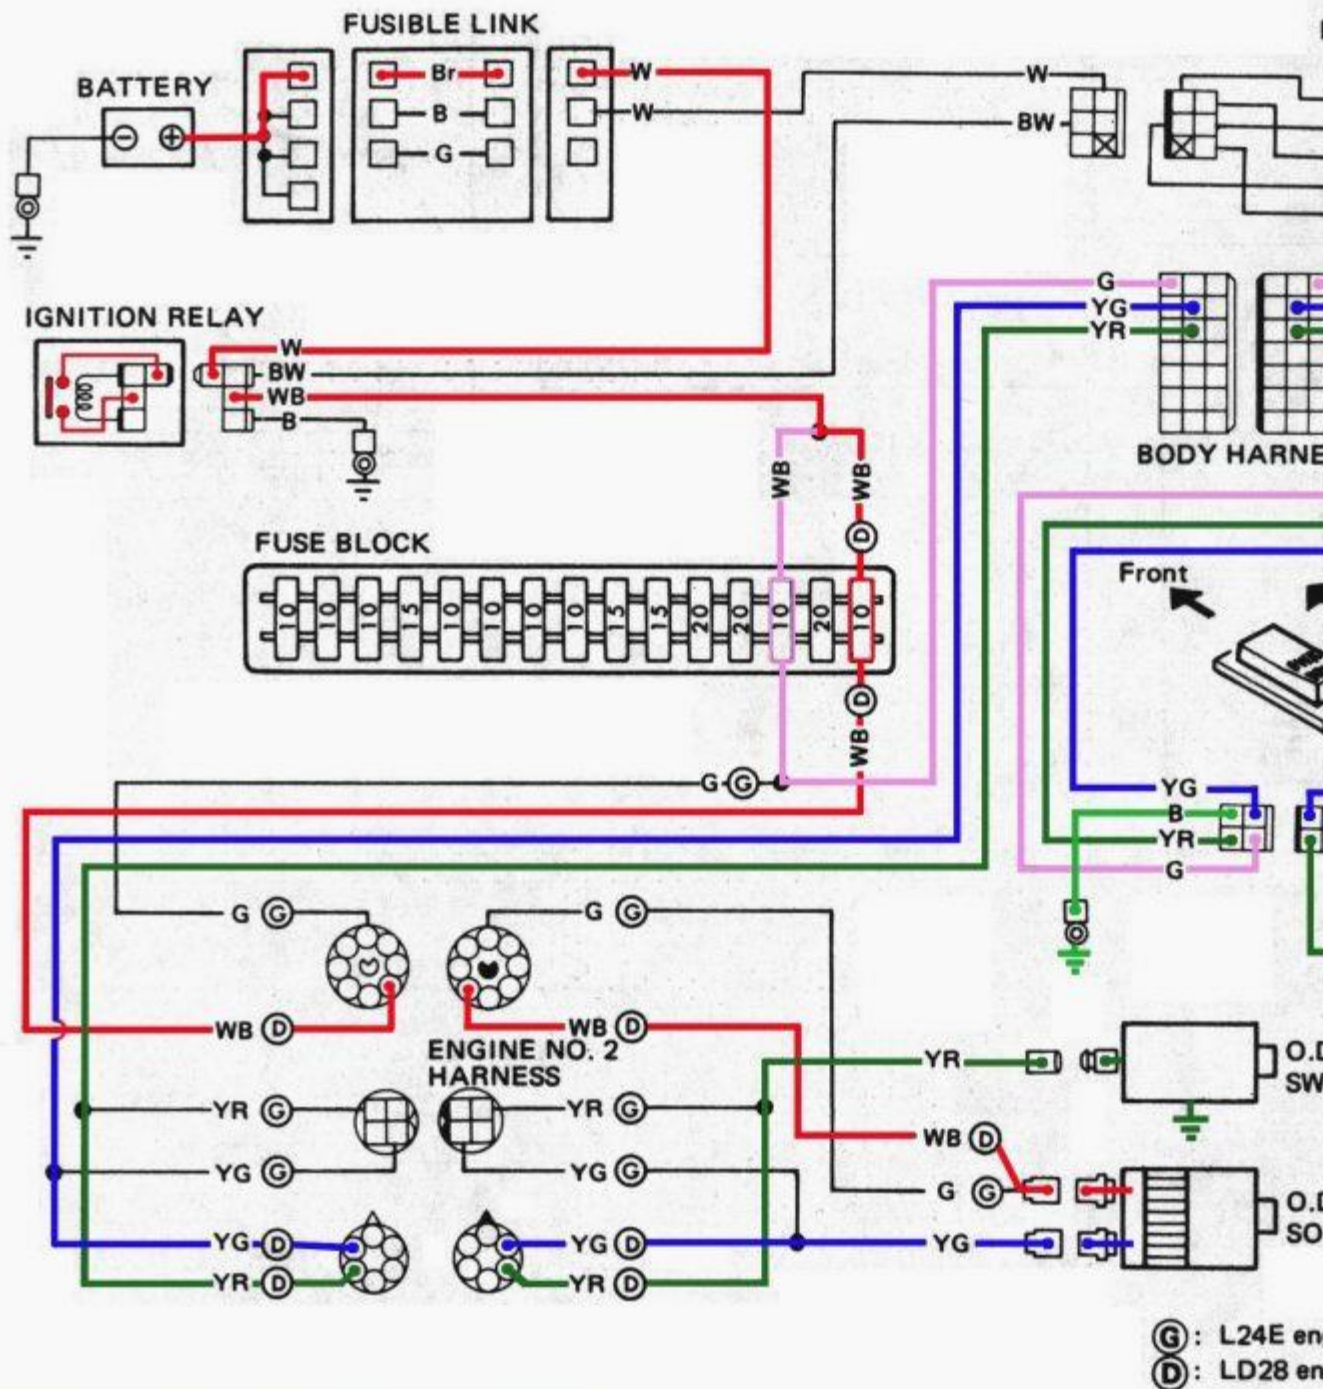

LEGEND

- = 12v+ to OD Cancel Solenoid
- = OD Cancel Solenoid to console switch
- = Ground path for OD Cancel Solenoid (console switch to Ground)

AT-13